


GLASSLESS MIRROR.COM RE-FIT OVERHEAD DEMONSTRATION CLAMPS

1) REMOVE 10-32 ADAPTERS FROM POUCH- CLAMP NOT INCLUDED- FROM ORIGINAL SHIPMENT




2) UNSCREW ¼-20 THREADED STUD FROM CLAMP- MAY USE PLIERS IF NECESSARY.

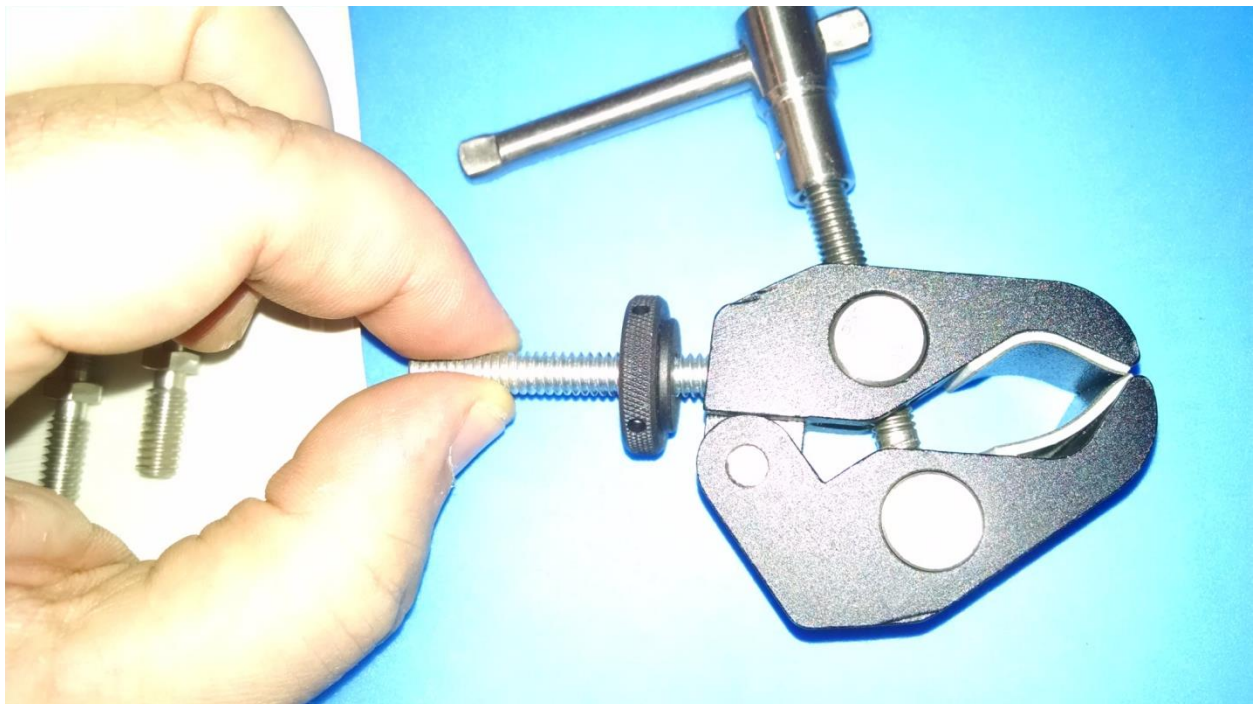

3) SCREW IN ¼-20 SIDE OF ADAPTER INTO CLAMPS



4) GENTLY TIGHTEN WITH ADJUSTABLE OR 5/16" WRENCH

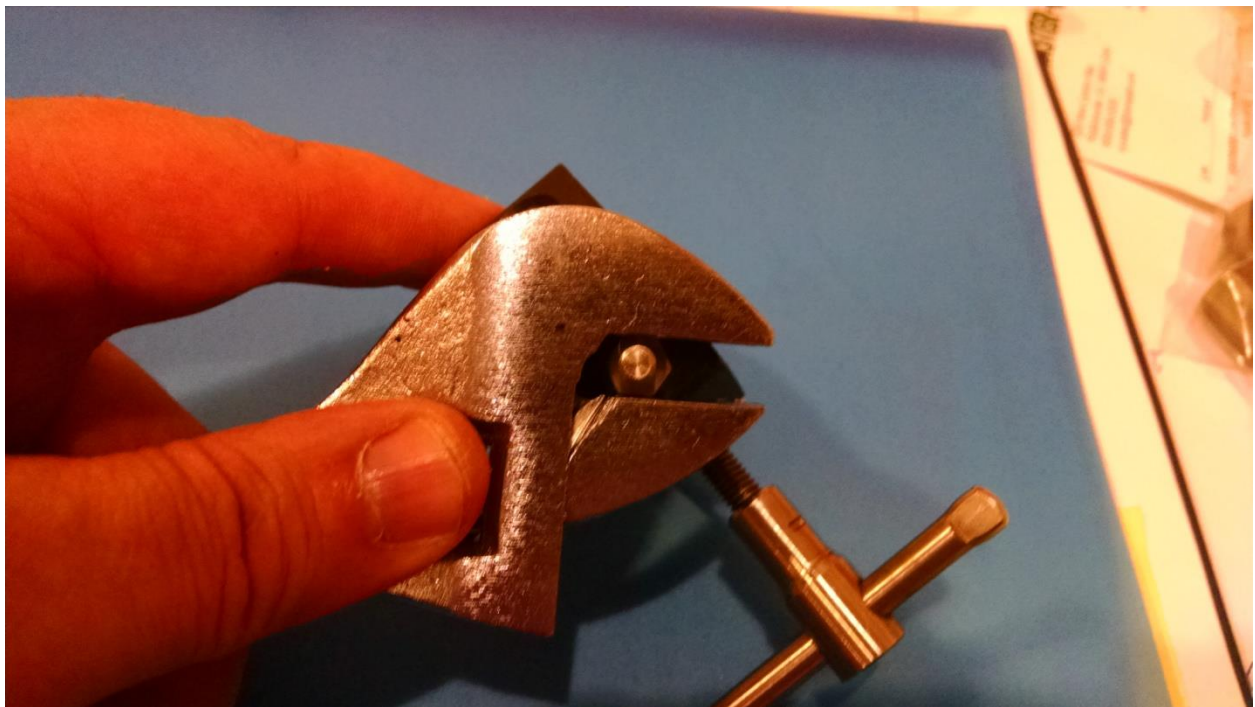



5) SCREW CLAMP AND STUD ASSEMBLY INTO BACK OF MIRROR PANEL



6) AFTER THREAD HAS REACHED BOTTOM, BACK-UP CLAMP UNTIL IS PARALLEL WITH MIRROR SIDE.

