

# ATTACHING MIRROR STACKABLE STANDS WITH SELF-DRILLING SCREWS


KIT INCLUDES: STACKABLE STANDS, 4PCS SELF-DRILLING SCREWS & ONE POWER HEX DRIVER BIT



1) PLACE MIRROR FACE DOWN CAREFULLY PROTECTING MYLAR SURFACE, RAISE BACK OF MIRROR HIGH ENOUGH TO POSITION STAND ALONG EDGE OF MIRROR THEN PEEL BACK PROTECTIVE PLASTIC.



2) LOAD HEX DRIVER BIT (INCLUDED WITH SCREWS). SET CLUTCH AT LOW TORQUE (#2 - #4) ALIGN STAND ANGLE TO EDGE OF MIRROR. HOLD STAND IN POSITION AND DRILL SELF-DRILLING SCREW WITH FLAT WASHER THRU HOLES IN STAND.

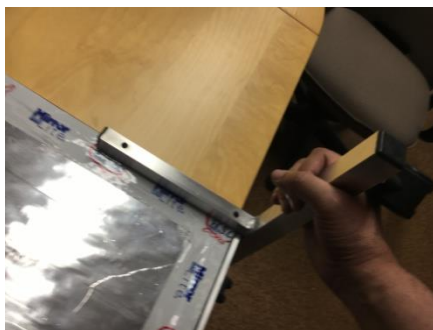

3) ONCE SCREW THREADS INTO ALUMINUM FRAME, REDUCE TORQUE ON DRIVER TO PREVENT STRIPPING OF SCREWS. REPEAT STEPS FOR REMAINING SCREWS. SAVE HEX DRIVER FOR DISASSEMBLY IF STORED OR TRANSPORTED. REPEAT FOR OPPOSITE CORNER OF MIRROR.



FINISHED!!!